


**KitchenAid®**

**36" Stainless Professional Dual Fuel Range**

**MODELS:**

KDRS467VSS04 (Stainless)


# COOKTOP, BURNER AND GRATE PARTS

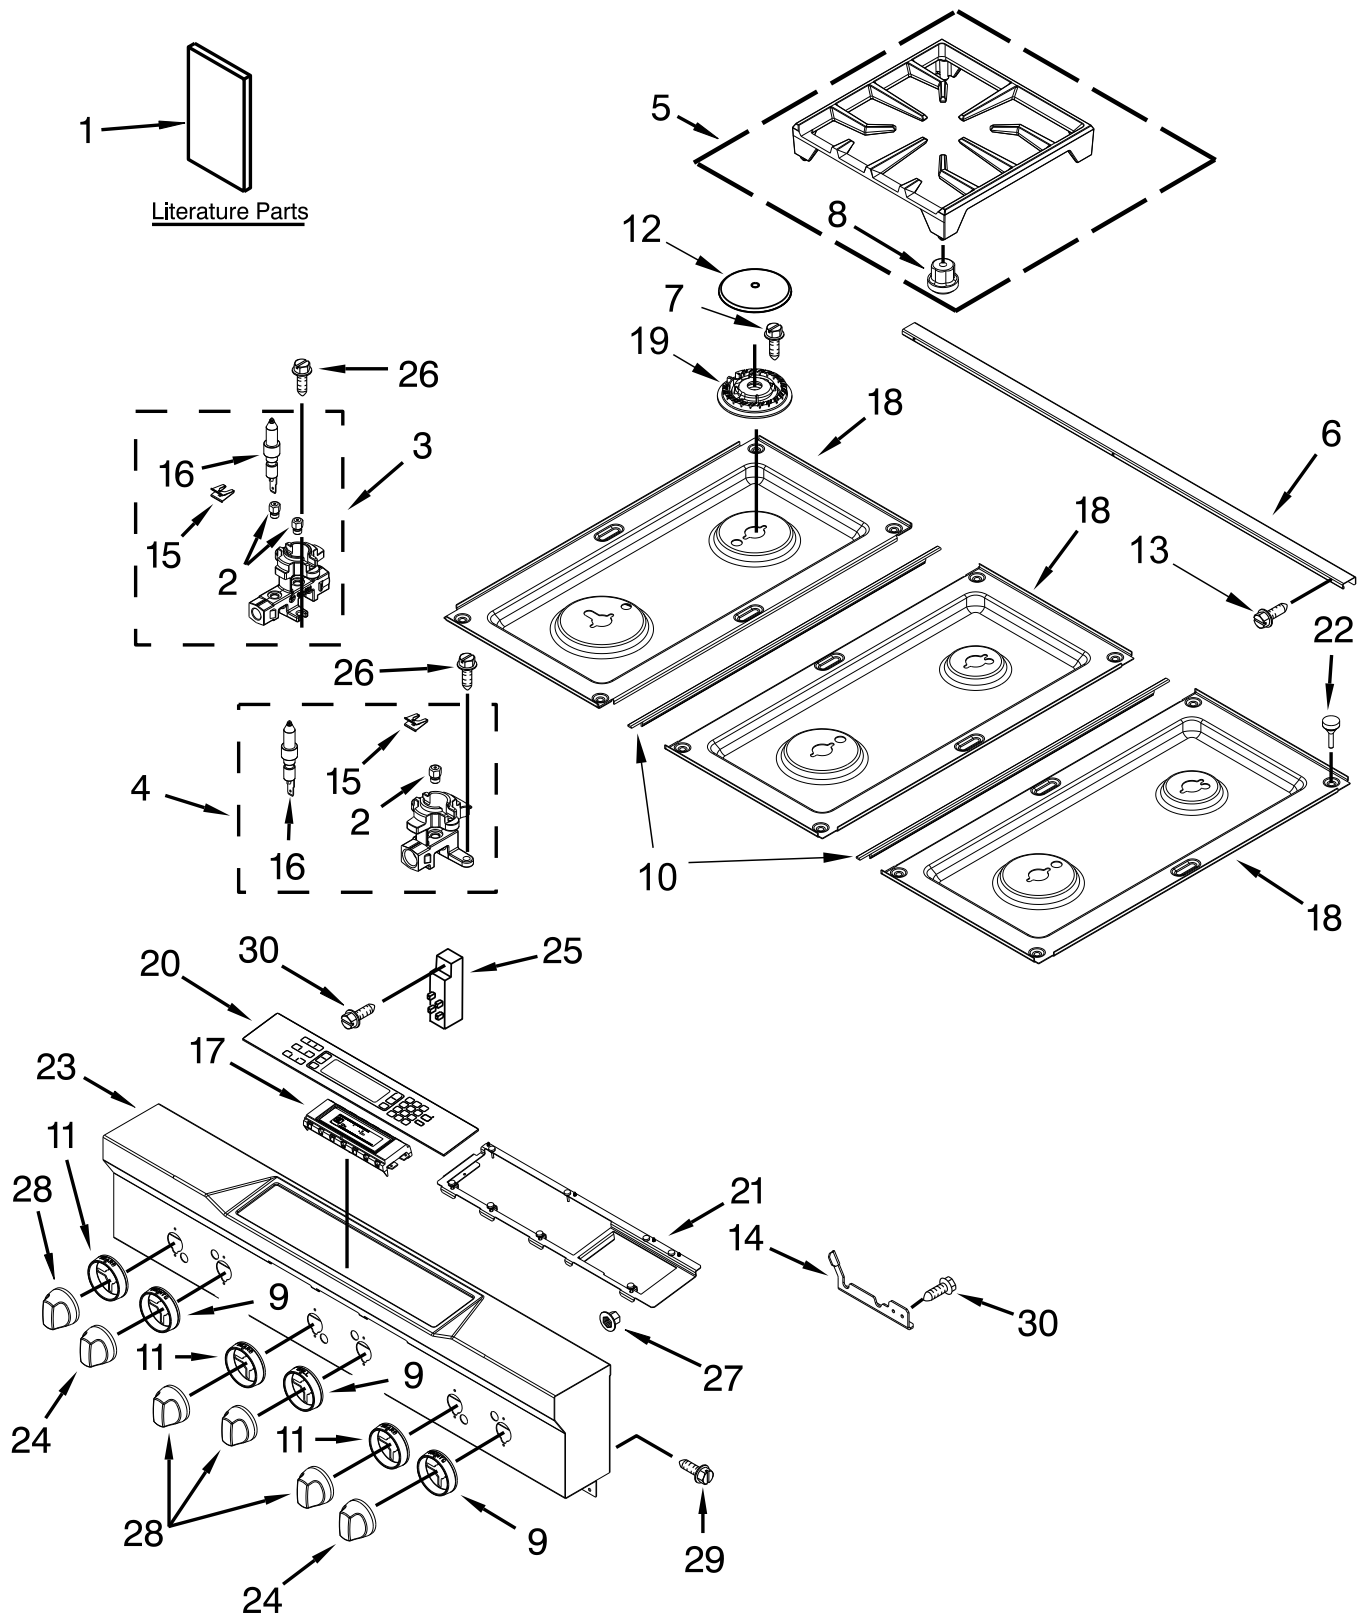

# COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12		Cap, Burner	24	W10250389	Knob
	W10403294	Sheet, Tech (English)		W10256034	Black			(Left Front & Right Front)
	W10403296	Sheet, Tech (French)			(Left Front & Right Front)	25	W10116108	Reignitor
	W10399386	Use & Care Guide		W10256032	Black	26	3177991	Screw
	W10526083	Instructions, Installation			(Left Rear, Right Rear & Center Front)	27	7103P166-60	Nut
	9762761	Tips, Safe Cooking (English)		W10364463	Black	28	W10250391	Knob
	W10065852	Tips, Safe Cooking (French)			(Center Rear)			(Left Rear, Right Rear, Center Front, & Center Rear)
	W10705249	Instructions, Installation (Bi-Lingual)	13	7101P338-60	Screw	29	7101P500-60	Screw
2	W10340424	Orifice (17K)	14	W10130760	Bracket, Moving Console (Left)	30	7101P426-60	Screw
		(Left Front & Right Front, High)		W10130759	Bracket, Moving Console (Right)			FOLLOWING PARTS NOT ILLUSTRATED
	W10256132	Orifice (1.2K)	15	W10256046	Spring, Electrode		W10494088	Harness, Wire (Communication)
		(Left Front & Right Front, Low)		8286863	Spring, Electrode		W10338986	Harness, Wiring (Main)
	W10364221	Orifice (15K)			(Center Rear)		W10507834	Harness, Ignition
		(Left Rear, Right Rear & Center Front)	16	W10256047	Electrode, Burner		W10726866	Connector, Ribbon
	W10282663	Orifice (5K)		8286725	Electrode, Burner		W10345322	Harness, Door Latch
		(Center Rear)			(Center Rear)		W10399614	Harness, Switch
3	W10364555	Assembly, Orifice Holder	17	W10298119	Module, User Interface		W10624586	Cord, Power
		(Left Front & Right Front)	18		Cooktop		313438	Clip, Harness
4	W10364556	Assembly, Orifice Holder		W10352969	Black (Left)		9757778	Bushing, Snap Split
		(Left Rear, Right Rear & Center Front)		W10352966	Black (Center)		112432	Nut, Hex
	W10282659	Assembly, Orifice Holder		W10352967	Black (Right)		4450800	Screw, Grounding
		(Center Rear)	19	W10495853	Spreader, Flame		W10368807	Tie, Cable
5	W10115928	Grate, Burner			(Left Front & Right Front)		W10177363	Grommet, Flexible 60mm
6	W10269217	Island, Trim		W10256027	Spreader, Flame		W10183556	Clip, Wire
7	W10373929	Screw			(Left Rear, Right Rear & Center Front)		8019P013-60	Clip, Wire Lock
8	8286695	Bumper, Grate		W10282515	Spreader, Flame		9759877	Retainer, Strain Relief
9	W10261510	Bezel, Front			(Center Rear)		W10766100	Kit, LP Conversion
10	W10271524	T-Strip	20	W10116104	Keypad		W10340850	Reducer, Stem
11	W10261512	Bezel, Rear	21	W10250476	Bracket, User Interface		W10253333	Bracket, Anti-Tip
			22	4448520	Bumper, Door		7101P485-60	Screw, Anti-Tip Kit
			23	W10115888	Panel, Control			

# BURNER BOX, GAS VALVES, AND SWITCH PARTS

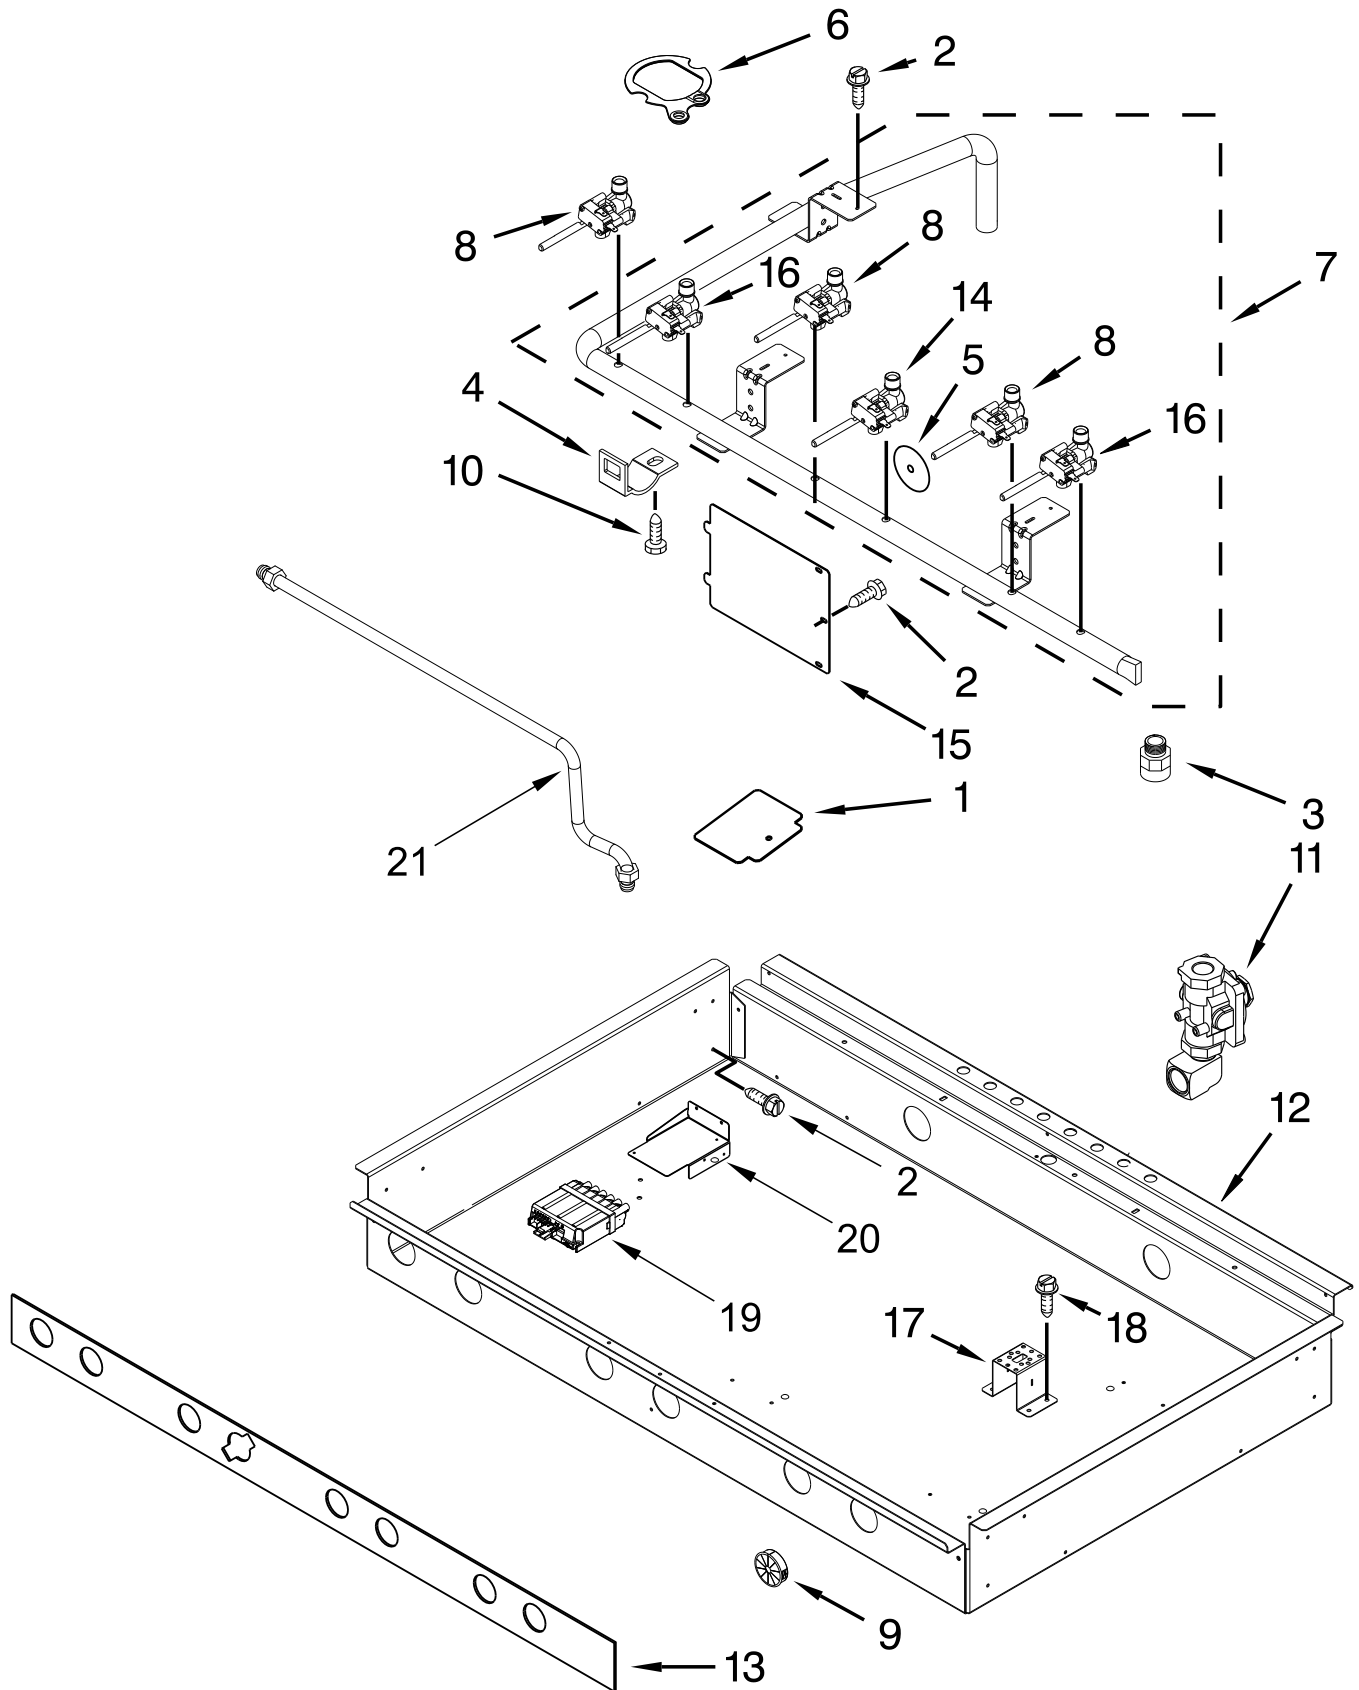


# BURNER BOX, GAS VALVES, AND SWITCH PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10287036	Cover, Housing
2	7101P426-60	Screw
3	4453115	Adapter, Female
	4453116	Adapter, Male
4	W10432260	Bracket, Valve
5	W10189177	Seal, Switch Cover
6	8286930	Gasket, Orifice
7	W10402611	Assembly, Manifold
8	W10385582	Valve, Single
9	W10189097	Bushing, Burner Box

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10189140	Screw
11	W10293267	Regulator, Pressure
12	W10371516	Box, Burner
13	W10145622	Insulation, Burner Box
14	W10385583	Valve, Simmer
15	W10115843	Cover, Ignition
16	W10371235	Valve, Dual
17	W10560553	Bracket, Burner
18	7101P426-60	Screw
19	W10475147	Module, Spark

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
20	W10498407	Bracket, Spark Module
21	W10269191	Tube, Pressure Regulator
		Following Parts Not Illustrated
	W10353133	Tube (Right Rear)
	W10353141	Tube (Right Front)
	W10353152	Tube (Center Front)
	W10353154	Tube (Left Front)
	W10280797	Tube, (Left Back)

# CHASSIS PARTS

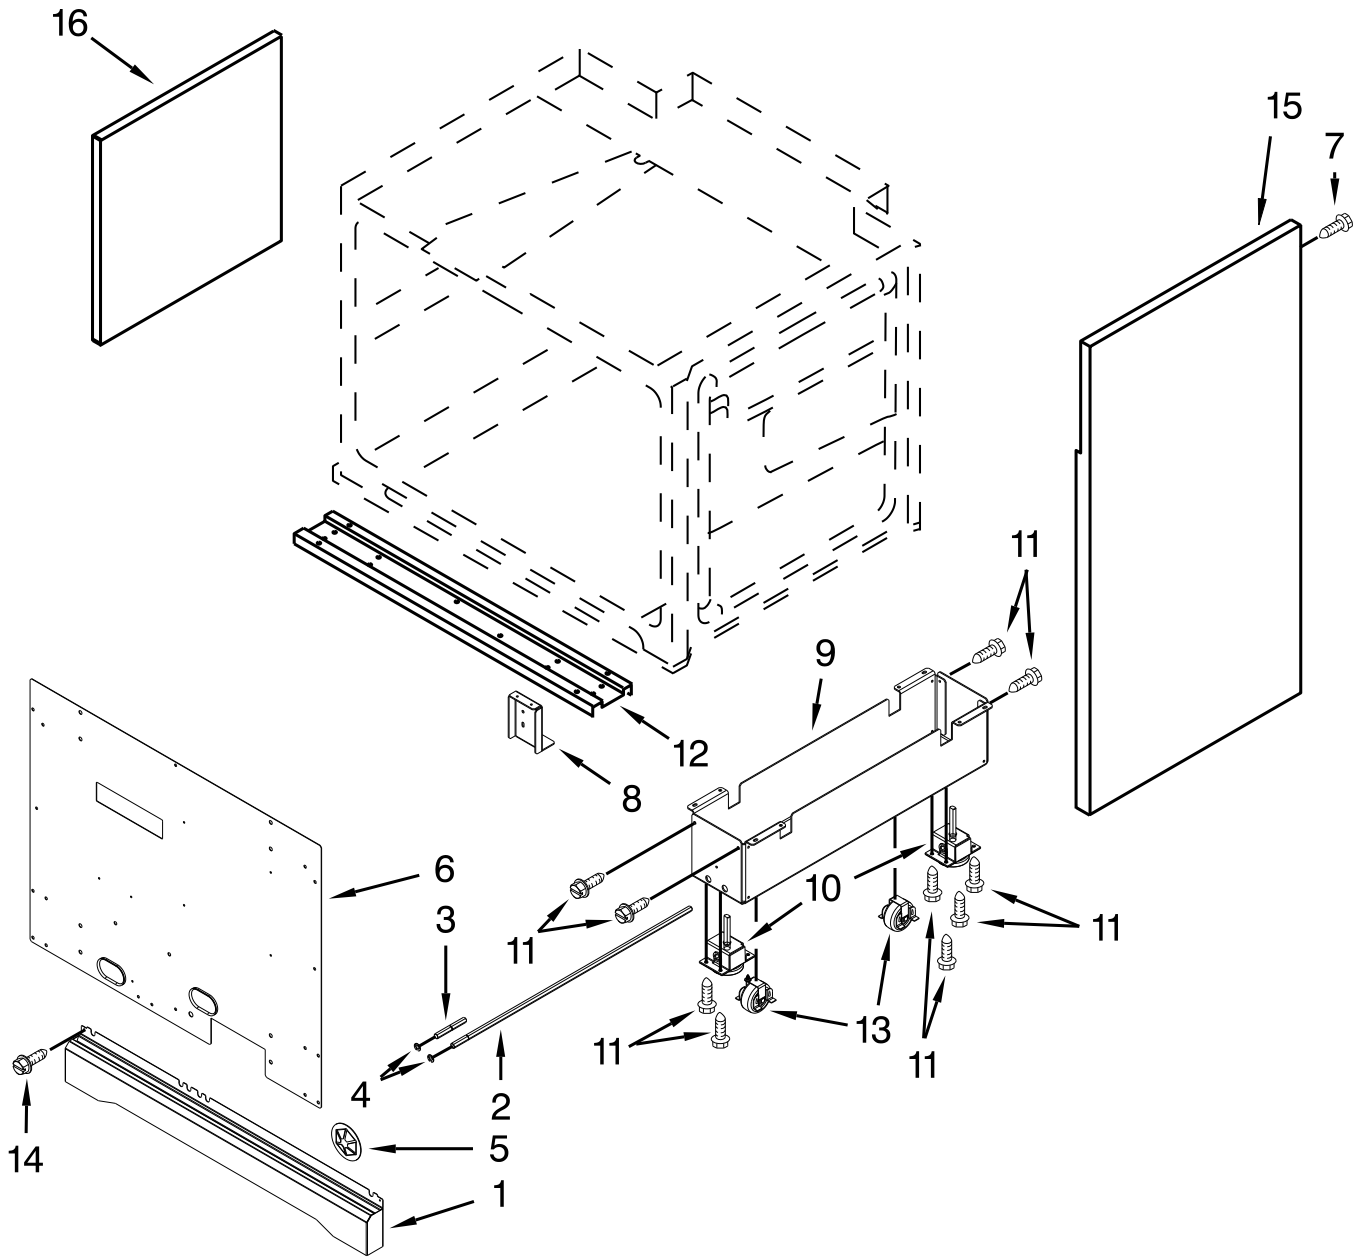


# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10225970	Kickplate
2	W10115869	Shaft, Long
3	W10115793	Shaft, Short
4	489504	E-Ring
5	3400968	Nut
6	W10269196	Duct, Bottom
7	3196537	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10115850	Bracket, Pressure Regulator
9	W10249333	Base, Leveling Leg
10	9760860	Leveler
11	4449743	Screw
12	W10269193	Support, Channel
13	W10138054	Assembly, Roller

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	3196537	Screw
15	W10250465	Panel, Side (Left)
	W10250464	Panel, Side (Right)
16	W10269206	Chassis, Side (Left)
	W10269205	Chassis, Side (Right)

# OVEN PARTS

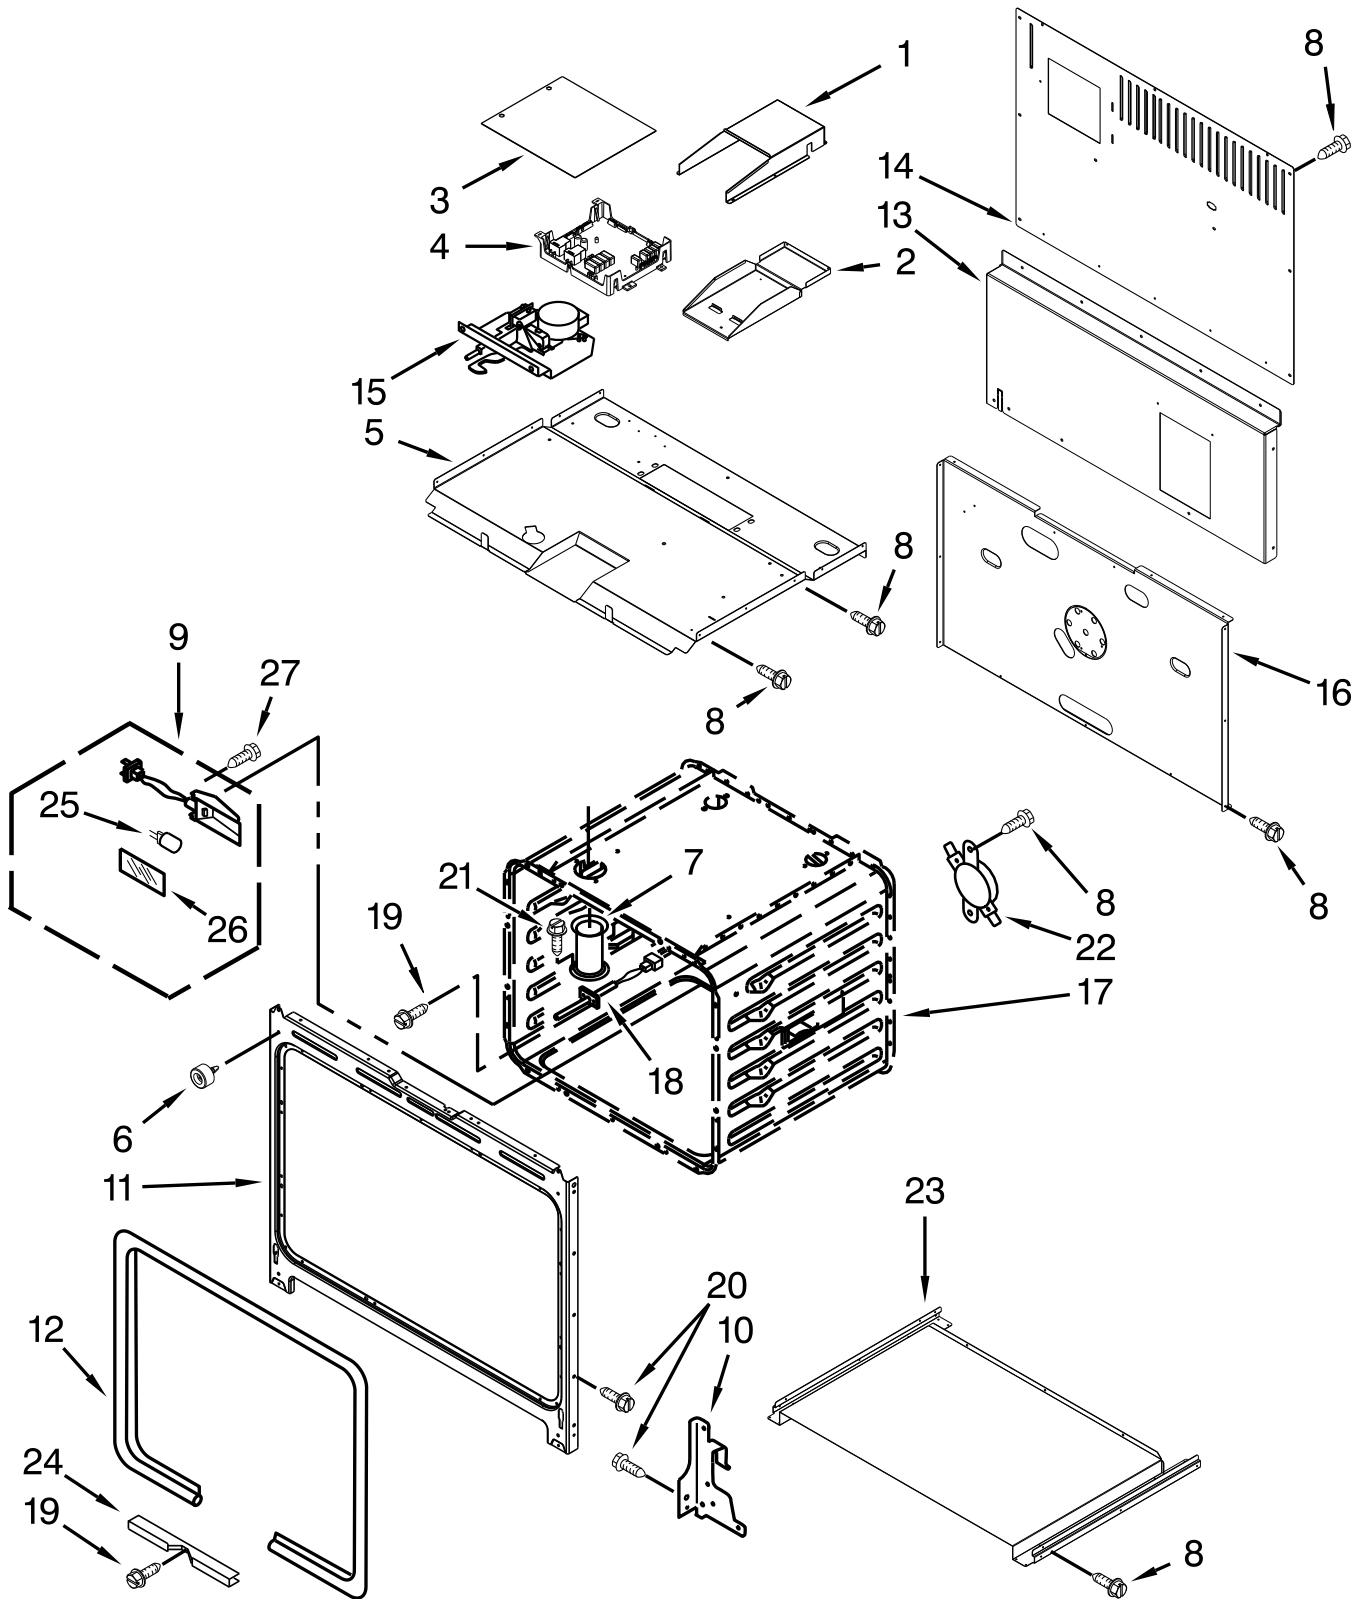


# OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10235557	Assembly, Drawer
2	W10249337	Support, Control
3	W10239444	Seal, Control
4	W10825620	Manager, Appliance
5	W10267896	Top, Chassis
6	W10105790	Bumper & Screw
7	W10288061	Tube, Vent
8	7101P426-60	Screw
9	W10307114	Assembly, Oven Light
10	4455605	Receiver, Hinge (Left)
	4455606	Receiver, Hinge (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10160867	Frame, Front
12	W10850857	Gasket, Oven
13	W10145398	Panel, Back Bottom
14	W10269208	Panel, Back Top
15	W10195935	Latch, Motorized
16	W10235551	Back, Chassis
17		Liner, Oven (Not serviceable)
18	W10131825	Sensor
19	4449154	Screw
20	4449040	Screw
21	3196176	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
22	4449751	Thermostat (TOD)
23	W10235536	Bottom, Chassis
24	W10157511	Retainer, Gasket (30")
25	W10169757	Bulb, Light
26	W10169756	Lens, Light
27	4449748	Screw
		FOLLOWING PARTS NOT ILLUSTRATED
	W10246067	Insulation, Wrapper
	W10160807	Insulation, Back


# TOP VENTING PARTS

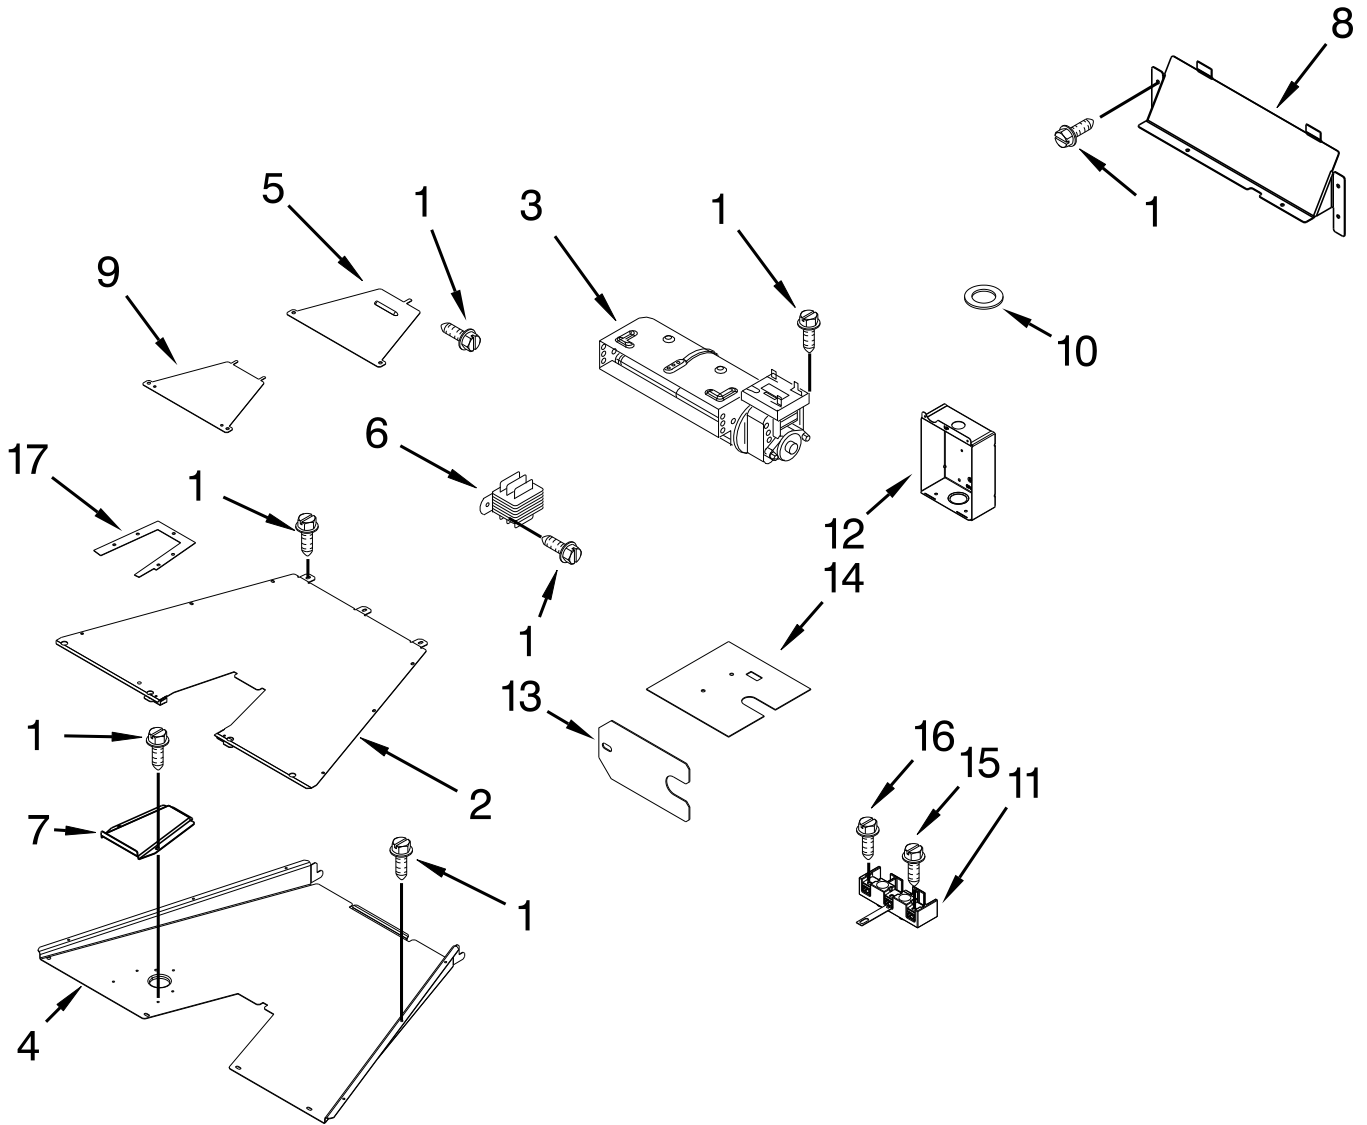

# TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P426-60	Screw	7	W10246075	Slope, Exhaust Vent (30")	13	W10618712	Cover, Channel
2	W10160896	Vent, Cooling Top (30")	8	W10160844	Bracket, Blower	14	9759721	Insulator, Terminal Box
3	W10245511	Blower 60MM	9	W10160858	Cover, Latch	15	112432	Nut, Hex
4	W10246078	Vent, Cooling Bottom (30")	10	W10270396	Seal, Chimney	16	3196163	Screw
5	W10160875	Plate, Cooling Latch	11	9761958	Block, Terminal	17	W10270397	Seal, Vent Slope (30")
6	W10495854	Transformer, Control	12	W10467022	Box, Terminal			


# OVEN DOOR PARTS

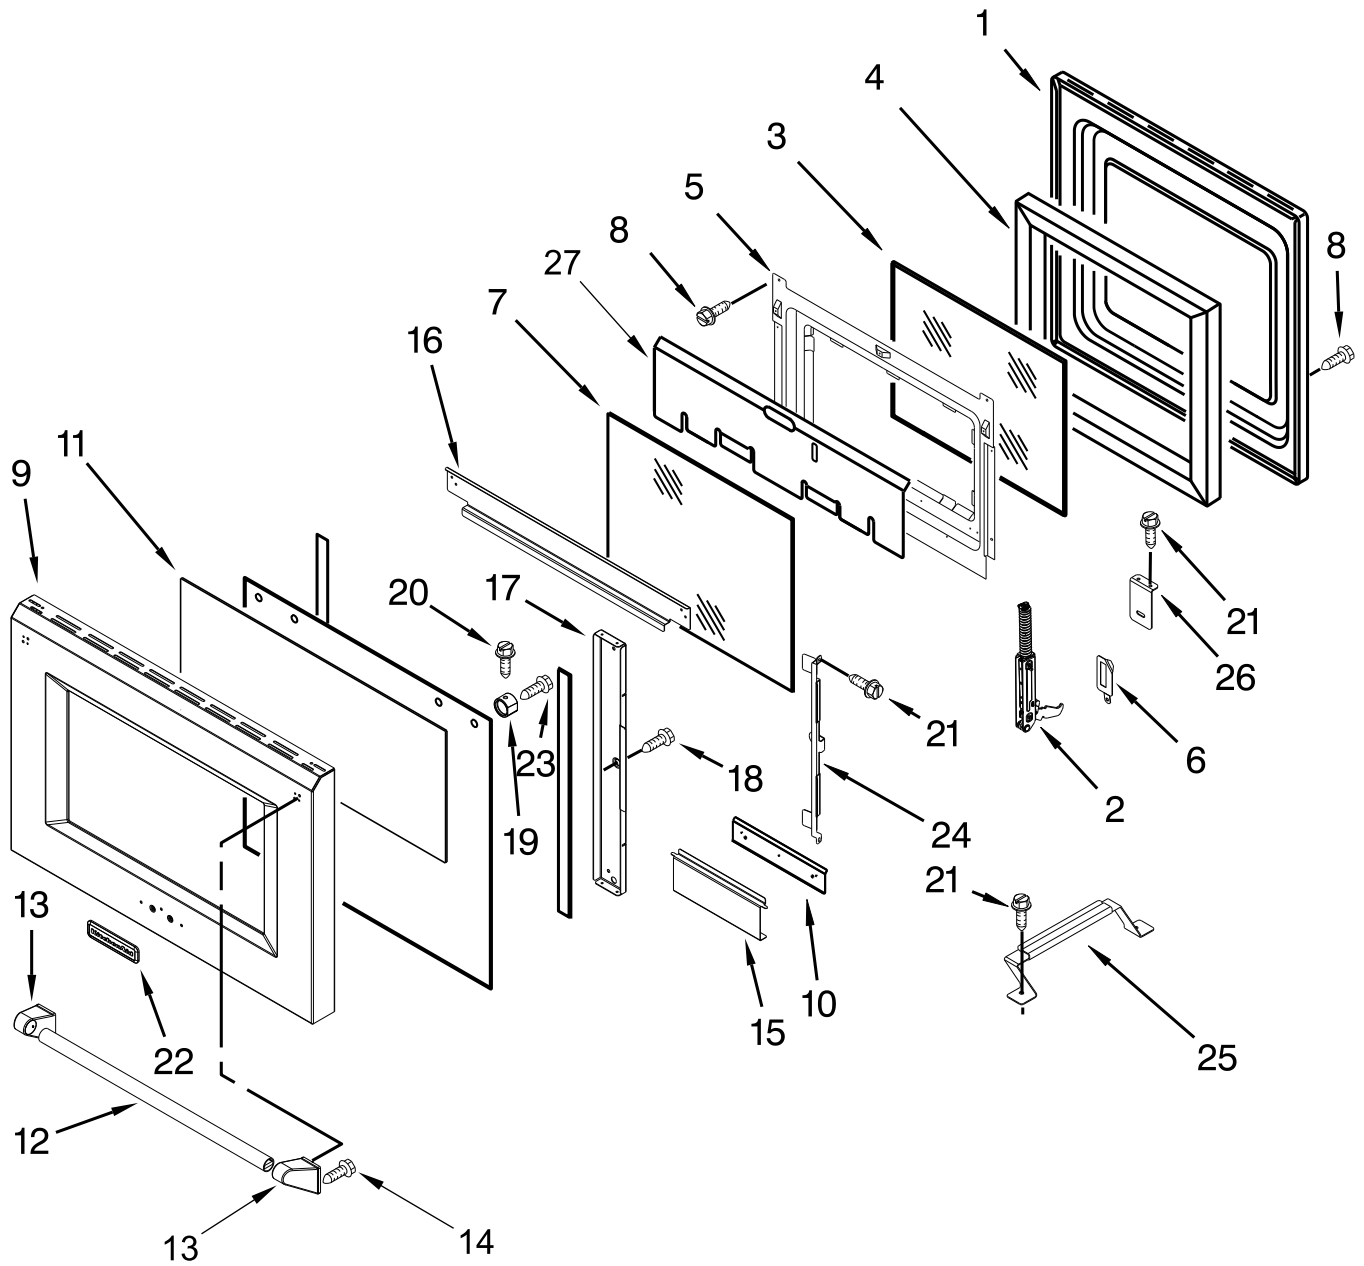

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10188330	Panel, Door	10	W10226024	Shield, Heat Bottom	20	W10061760	Screw
2	W10774097	Hinge, Door (Left)	11	W10115712	Glass, Outer	21	7101P426-60	Screw
	W10774096	Hinge, Door (Right)	12	W10115718	Handle, Door	22		Badge
3	W10226005	Glass, Inner	13	W10226026	Handle, End Cap (Left)		W10113961	Stainless
4	W10115765	Insulation, Door		W10226025	Handle, End Cap (Right)	23	W10217130	Screw
5	W10188324	Retainer, Glass	14	W10212184	Screw	24	9759229	Bracket, Side
6	W10115876	Cover, Hinge (Left)	15	W10145810	Bracket, Bottom	25	9759230	Bracket, Central
	W10115877	Cover, Hinge (Right)	16	W10145806	Bracket, Top	26	W10115715	Bracket, Door Top
7	W10188327	Glass, Inner	17	W10145811	Bracket, Outer Glass (Side)	27	W10188328	Shield, Heat Top
8	W10292297	Screw	18	3196537	Screw			
9	W10225960	Panel, Door	19	W10225964	Support, Handle			

# INTERNAL OVEN PARTS

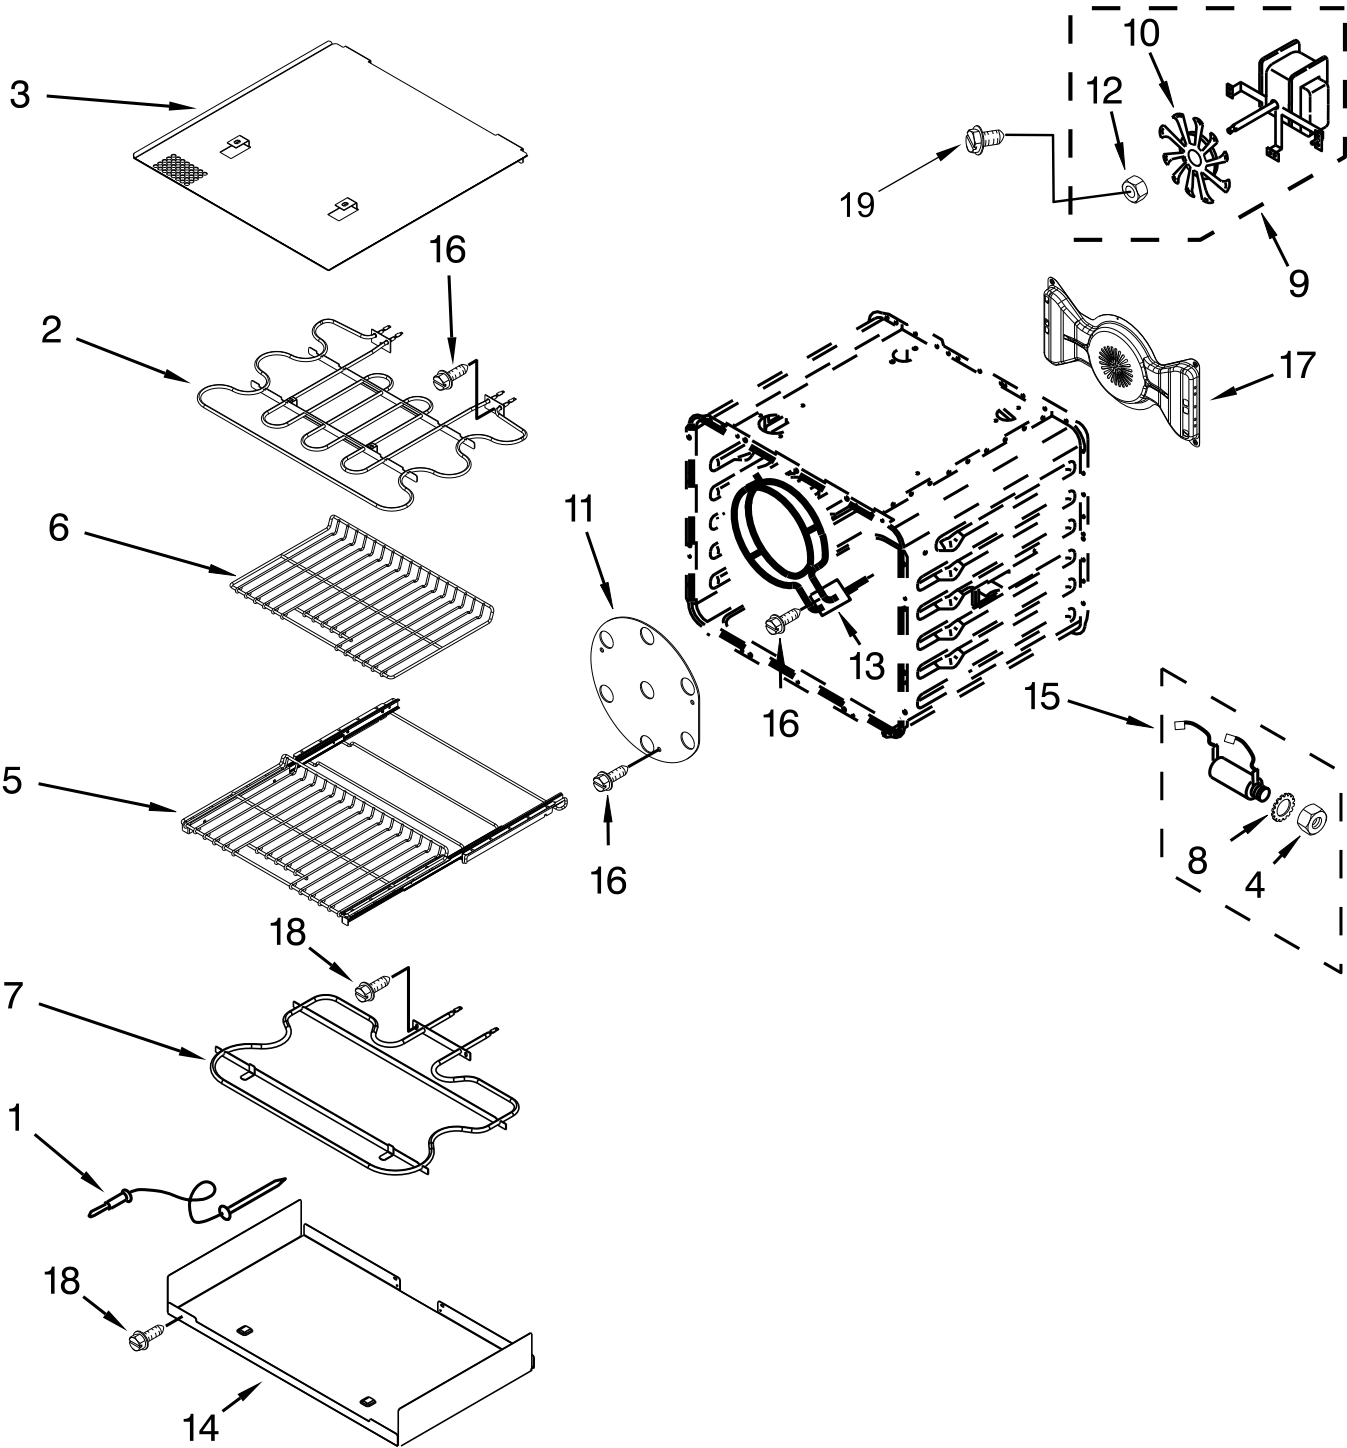

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755542	Probe, Temperature	7	W10115992	Element, Hidden Bake	14	W10160872	Tray, Hidden Bake
2	W10115991	Element, Broil	8	9755547	Washer, Lock	15	9755543	Jack, Meat Probe
3	W10160857	Shield, Broil Element	9	W10722667	Fan, Convection	16	4449154	Screw
4	9755546	Nut, Hidden	10	W10631503	Blade, Fan	17	W10160868	Baffle, Convection
5	W10570868	Rack, Oven (Sliding)	11	W10261523	Plate, Fan	18	7101P426-60	Screw
6	W10570880	Rack, Oven	12	W10631504	Nut, Acorn	19	W10720084	Screw
			13	9762242	Element, Convection Steam			

# OPTIONAL PARTS

## ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396920	Stainless Steel Cleaner & Polish
	8212510	Wipes, Stainless Steel
	31464	Cleaner, Cooktop
	31682	Appliance Cleaner
	4378577	Stone, Brick Pizza

## ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic
	4453191	Seal, Access Panel